





1675 Locust Street Red Bud, IL 62278 Phone: 618-282-8200 Fax: 618-282-8202

WARRANTY & TERMS

WARRANTY: 5 Year Limited Warranty on Thermoplastic coated elements. Ultra Play guarantees all items for one full year to be free of defects in workmanship or materials when installed and maintained properly. We agree to repair or replace, any items determined to be defective. Items specifically not covered by this warranty include vandalism, man made or natural disasters, lack of maintenance, normal weathering or wear and tear due to public abuse.

Damages or loss in transit is the responsibility of the carrier, whether visible or concealed. It is the responsibility of the recipient to assure that the order is received complete. Before signing the delivery receipt, inspect the shipment immediately and completely. Note any damages or shortages on the bill of lading. Damage reports must be filed within 5 days. Ultra Play is NOT responsible for damages or loss in transit. Title to all goods passes to the customer at the time of shipment. Ultra Play will assist in filing claims if the freight arrangements were made by Ultra Play at your request.


CANCELLATIONS AND RETURNS: Cancellations are only accepted with approval of Ultra Play. No merchandise shall be returned without a Return Goods Authorization number which is issued by customer service. Any authorized merchandise must be carefully packed and received in saleable condition. A restocking charge of up to 25% will be applied to all returned goods when the error is not the fault of Ultra Play. All returns must be shipped freight prepaid.




SAFETY WARNINGS & EQUIPMENT INSPECTION


- Owners and installers please note these safety warnings and make use of this checklist on a regular basis.
- Follow installation instructions when erecting equipment.
- Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.
- Check for and repair damage caused by wear or vandalism, a major factor in injury causing situations.
- All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.
- All equipment should be free of rust and repainted whenever necessary to deter rusting.
- We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.
- Never add components not intended for use with this product.
- Regular maintenance is necessary in this and all park and recreational equipment to insure the safety of the user.
- Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.
- Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.
- Check to be sure all fittings are tight and that bars and pipes do not move.
- Replace all worn S-hooks. S-hooks must be completely closed. Failure to close S-hooks can result in serious injury to the user. NEVER reuse S-hooks.
- Test for free movement of swing hanger and other moving attached parts.
- Check for worn chains and replace them.
- A soft resilient surface should be placed under all swings extending at least twice the height of the top rail both front and back.


HARDWARE

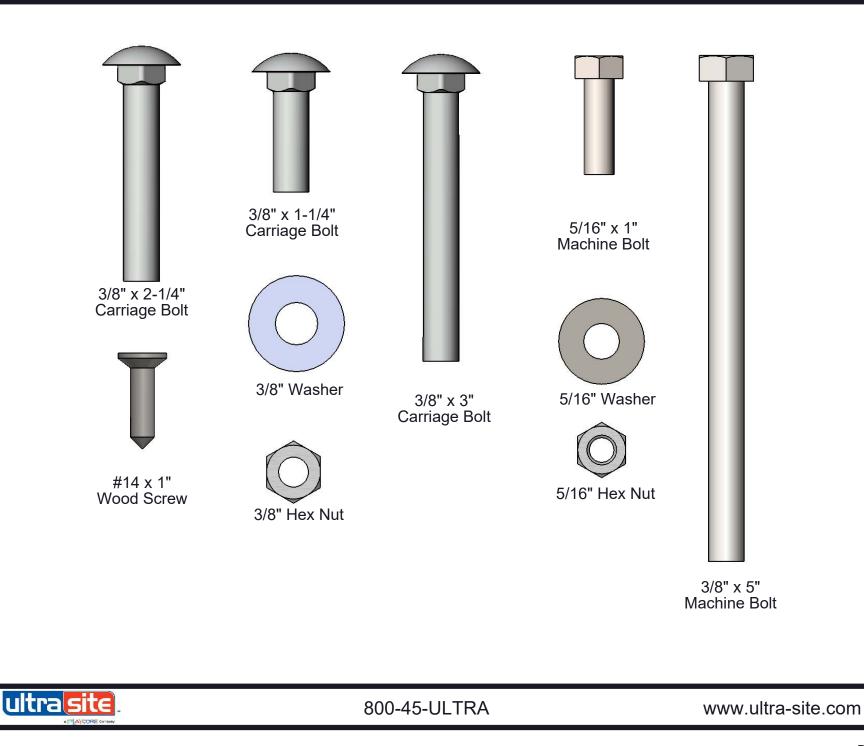



TOOLS REQUIRED

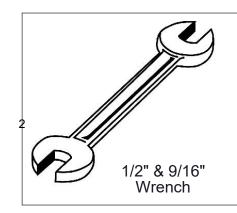

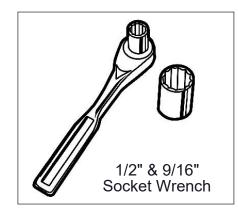

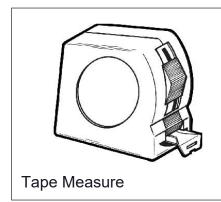

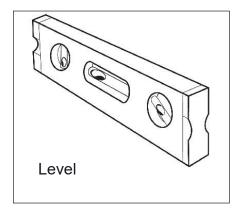

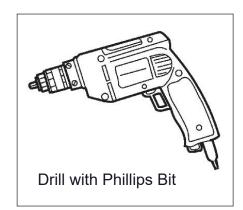



800-45-ULTRA

www.ultra-site.com

10/16/2018

ULTRA SITE PRODUCT SPECIFICATIONS

BT238-R6 6' PORTABLE BOLT THROUGH PICNIC TABLE WALK-THROUGH DESIGN

Top & Seats: Minimum of 96% commingled post-consumer or post-industrial recycled plastic. With a maximum of 4% due to various additives including color and UV stabilization to obtain desirable properties.

Frame: 2-3/8" O.D. x 12 gauge pre-galvanized structural steel tubing. Seat and top mounting points 7 gauge x 1-1/2" die stamped steel flat bar. Legs are bent over a mandrel through the bend radius producing a wrinkle free bend. Cross braces are 1-5/16" O.D. x 14 gauge pre-galvanized structural steel tubing. Superstructure angles shall be formed 12 gauge steel plate. One 1 1/2" x 3/4" x 1/8" x 26-1/2" center channel shall be mechanically fastened to the bottom side of tabletop to prevent warping of wood.

Frame Coating: Electrostatic powder coated application oven cured, or hot dipped galvanized after fabrication.

Hardware: Zinc plated fasteners.

Dimensions: 6' portable bolt through picnic table walk-through design. Top is 28-1/2" wide x 72" long and is 30-3/4" high. Seats are 9-1/2" wide x 72" long and 18-5/8" high. Outside to outside dimension is 62-1/8" x 72".




COMPONENTS


800-45-ULTRA


(14)

		(5	
ITEM NO.	PartNo	DESCRIPTION	Qty.	
1	01-04-0524	new BT238 wood leg	4	
2	01-04-0506	wood table top angle (new)	2	
3	01-04-0521	BT Seat Bracket (Left)	2	
4	01-04-0522	BT Seat Bracket (Right)	2	
5	XXX72-2x10-ST	2 x 10 Recycled Plastic Seat/Top Plank (6')	5	
6	01-04-0507	center c channel 3 slot (new)	1	
7	01-04-0508	wood table center bracket	1	
8	01-04-0523	34-3/4" wood brace	2	
9	01-04-0513	6' seat front recycled plastic superstructure angle	2	
10	01-04-0514	6' seat back recycled plastic superstructure angle	2	
11	01-04-0517	6' top recycled plastic superstructure angle	2	
12	01-04-0510	table top spacer strip	2	
13	01-04-0511	center cross spacer plate	1	
14	33-06-0016	3/8" x 2-1/4" Carriage Bolt (Zinc)	25	
15	33-02-0001	5/16" Zinc Plated Washer	16	
16	33-02-0002	3/8" Zinc Plated Washer	43	
17	33-05-0083	3/8" x 5" Machine Bolt (Zinc)	2	
18	33-06-0032	3/8" x 1-1/4" Carriage Bolt (Zinc)	2	
19	33-06-0008	3/8" x 3" Carriage Bolt (Zinc)	12	
20	33-01-0001	5/16" Hex Nut (Zinc)	8	
21	33-01-0002	3/8" Hex Nut (Zinc)	41	
22	33-05-0001	5/16" x 1" Machine Bolt (Zinc)	8	
23	33-05-0012	#14 x 1" wood screw	1	

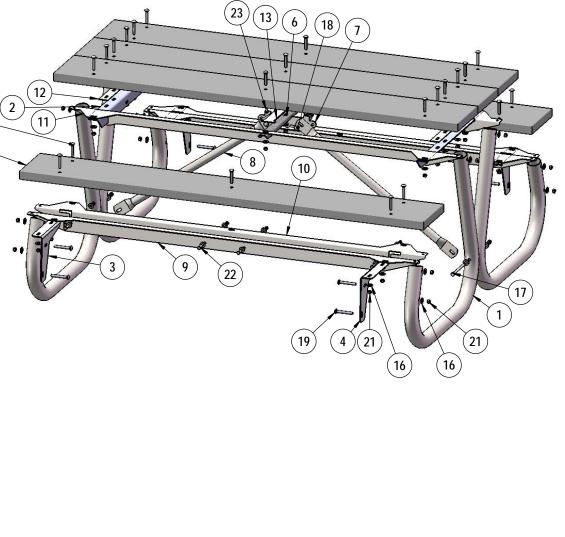

www.ultra-site.com

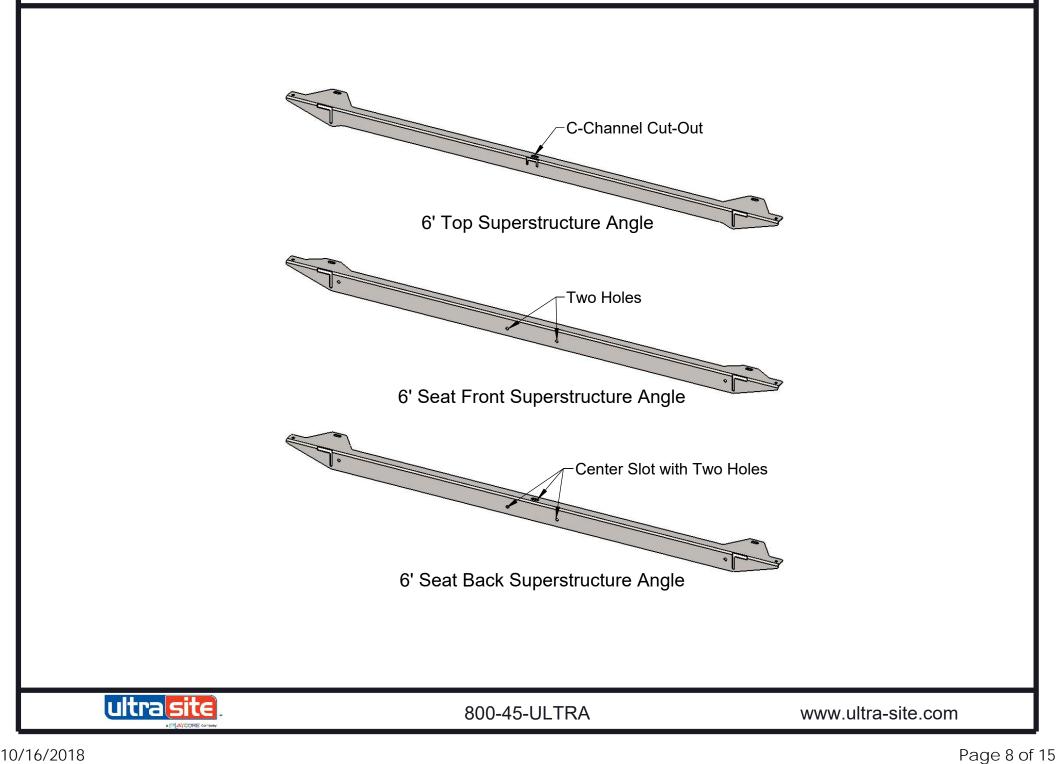

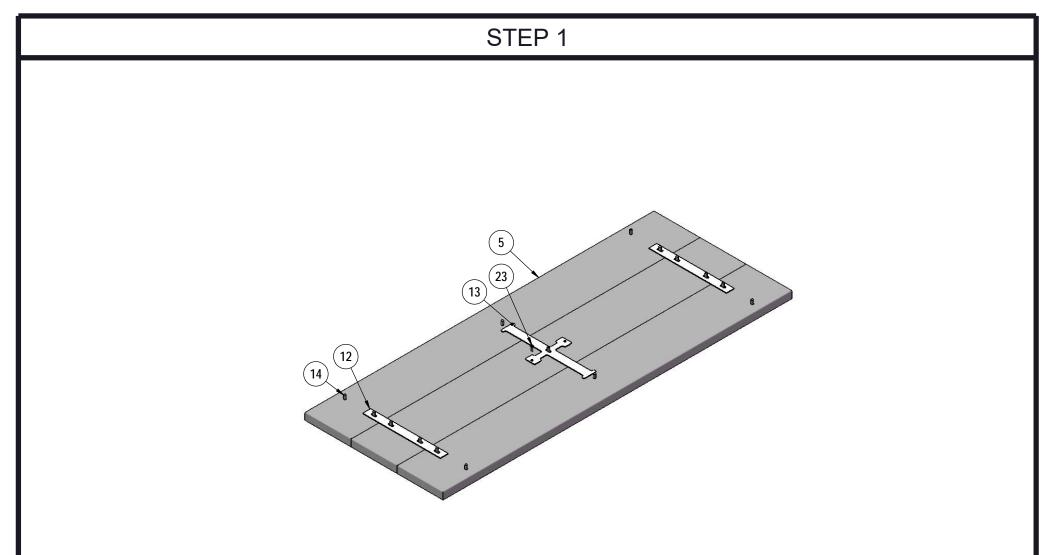


Insert the 5/16" x 2-1/4" Carriage Bolts through 3 Recycled Planks for the top. Place the Table Top Center Strips and Center Cross Spacer Plate on the corresponding hardware like shown. Attach the Center Cross Spacer Plate with a #14 x 1" Wood Screw.



800-45-ULTRA

www.ultra-site.com

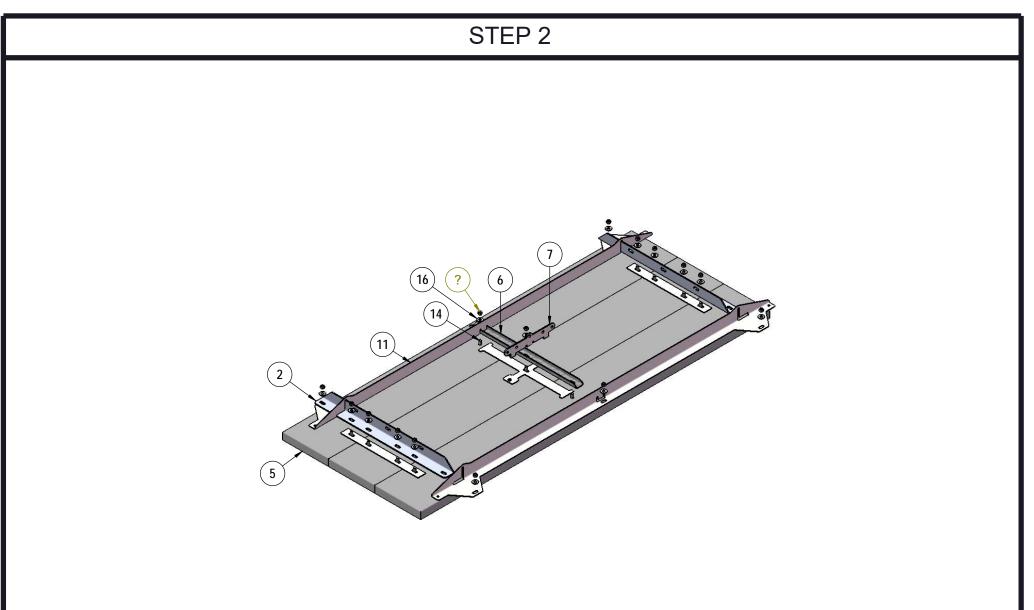


Slide the Top Superstructure Angles on the Wood Top Angles. The Slots in the superstructure shall be lined up with the outer slots in the Wood Top Angles. Slide the Center C-Channel through the middle slot of the Top Superstructure Angles. Attach partial assembly to the Top boards aligning with the hardware previously installed. Attach the Wood Table Center Bracket using the center bolt in the middle plank.



800-45-ULTRA


www.ultra-site.com

10/16/2018

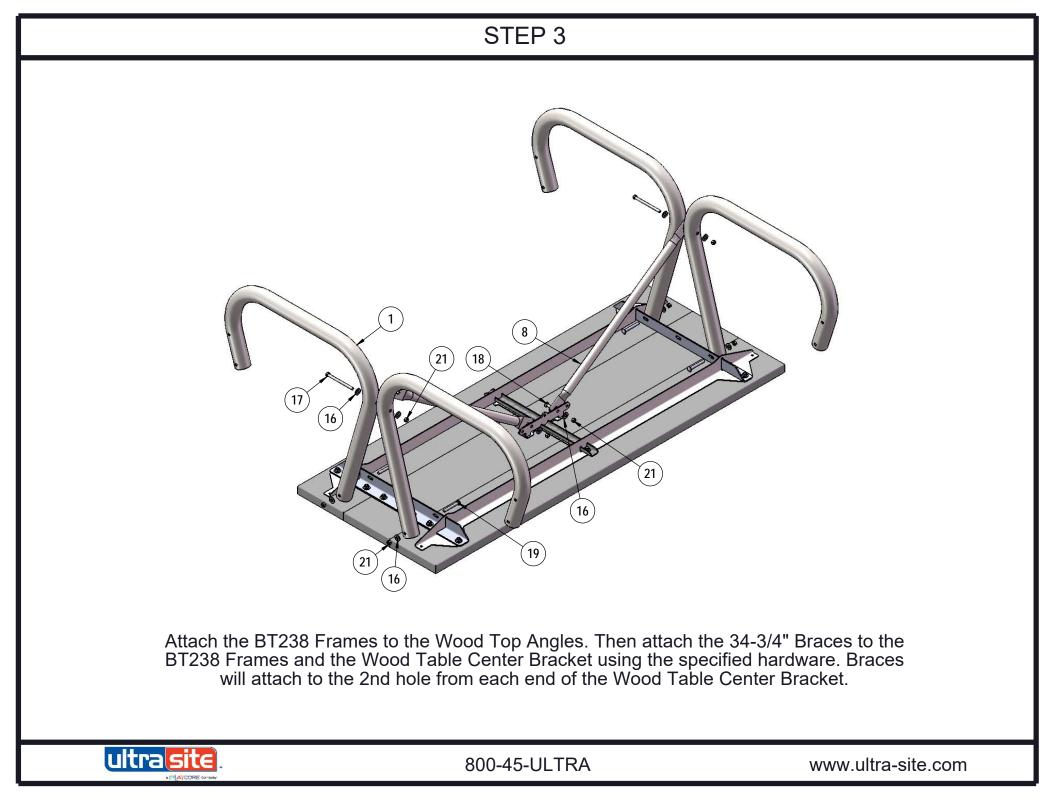

10/16/2018


Page 11 of 15

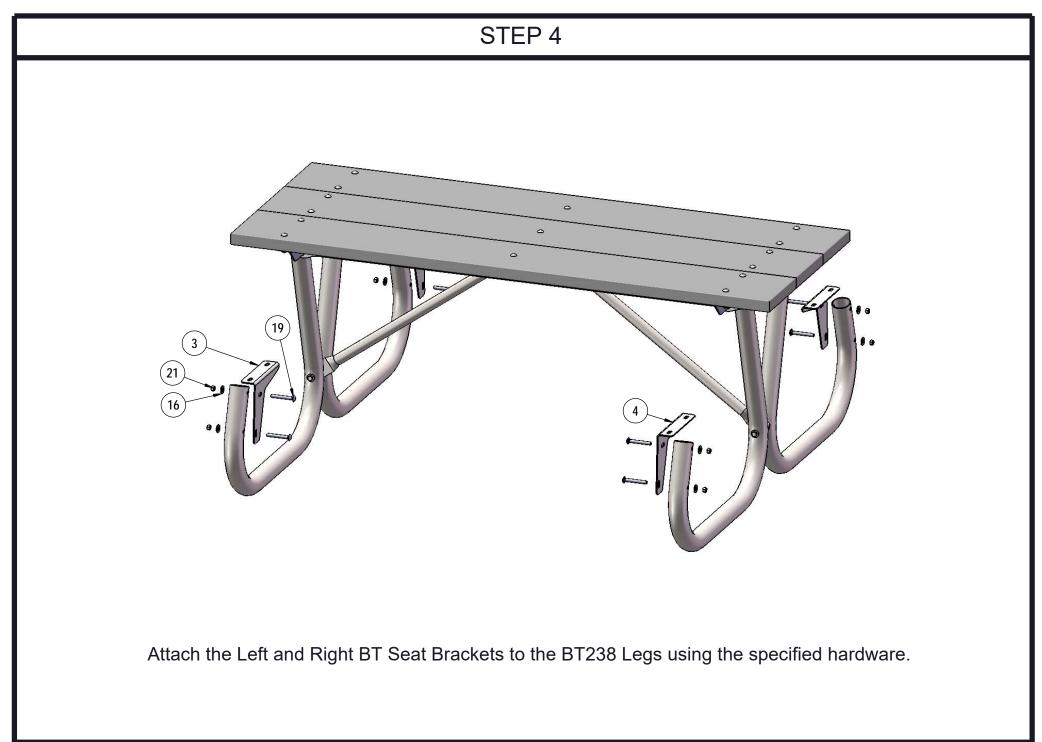



800-45-ULTRA

www.ultra-site.com

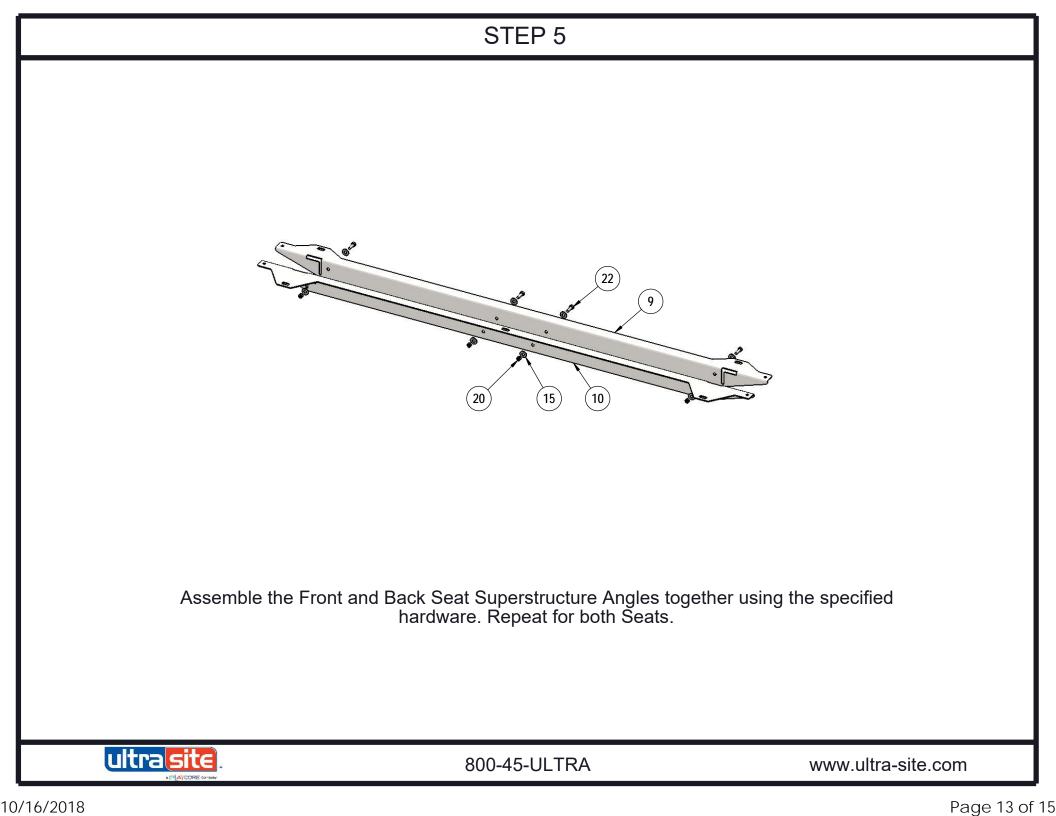

	STEP 6	
Back Seat Superstruct Superstructure Ang	structure Angle Assemblies onto the BT238 B cure angle will point toward the center of the th es and Recycled Planks to the BT238 Bracke in the center hole of the Recycled Seat Planks Seat Superstructure Angle.	ne table. Attach the Seat ets using the specified
	800-45-ULTRA	www.ultra-site.com
18		Page

OVERALL DIMENSIONS

