

1/30/2024 Page 1 of 9



#### **SAFETY WARNINGS & EQUIPMENT INSPECTION**


- Owners and installers please note these safety warnings and make use of this checklist on a regular basis.
- Follow installation instructions when erecting equipment.
- Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.
- Check for and repair damage caused by wear or vandalism, a major factor in injury causing situations.
- All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.
- All equipment should be free of rust and repainted whenever necessary to deter rusting.
- We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.
- Never add components not intended for use with this product.
- Regular maintenance is necessary in this and all park and recreational equipment to insure the safety of the user.
- Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.
- Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.
- Check to be sure all fittings are tight and that bars and pipes do not move.
- Replace all worn S-hooks. S-hooks must be completely closed. Failure to close S-hooks can result in serious injury to the user.
   NEVER reuse S-hooks.
- Test for free movement of swing hanger and other moving attached parts.
- Check for worn chains and replace them.
- A soft resilient surface should be placed under all swings extending at least twice the height of the top rail both front and back.


1/30/2024 Page 2 of 9


# HARDWARE 5/16"kep nut 5/16" x 1" Machine Bolt 5/16" Washer ultra site 800-45-ULTRA www.ultra-site.com


1/30/2024 Page 3 of 9

### TOOLS REQUIRED

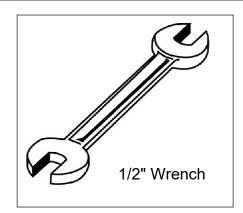

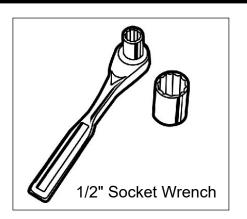

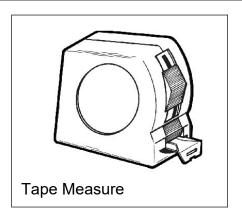

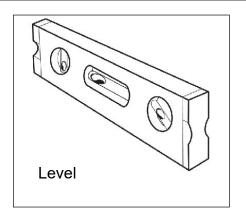



800-45-ULTRA www.ultra-site.com

1/30/2024 Page 4 of 9

#### ULTRA SITE PRODUCT SPECIFICATIONS

## Spencer Bench BENCH WITHOUT BACK- THERMALLY MODIFIED ASH

Seats: Seats are made from 1" x 4" Thermally Modified Ash Wood Planks. Anchorseal is immediately applied to each end after cut to prevent splitting. Planks are wiped with Acetone and then coated with a Penofin Rosewood Oil finish.

Frame: Frame is fabricated from 10ga & 12ga laser cut and formed plate. Electrically MIG welded.

Coating: Steel is sandblasted to near white condition. Coated with zinc rich epoxy primer and top coated with electrostatic powder coat, oven cured.


Hardware: Hardware shall be stainless steel.

Dimensions: 4' portable/surface mount bench. Seats are 22" wide x 48-1/2" long. Seat height is 18-1/4" from the ground to the top of the seat. The overall dimensions are 48-1/2" long x 22" wide x 18-1/4" tall.




800-45-ULTRA www.ultra-site.com

1/30/2024 Page 5 of 9

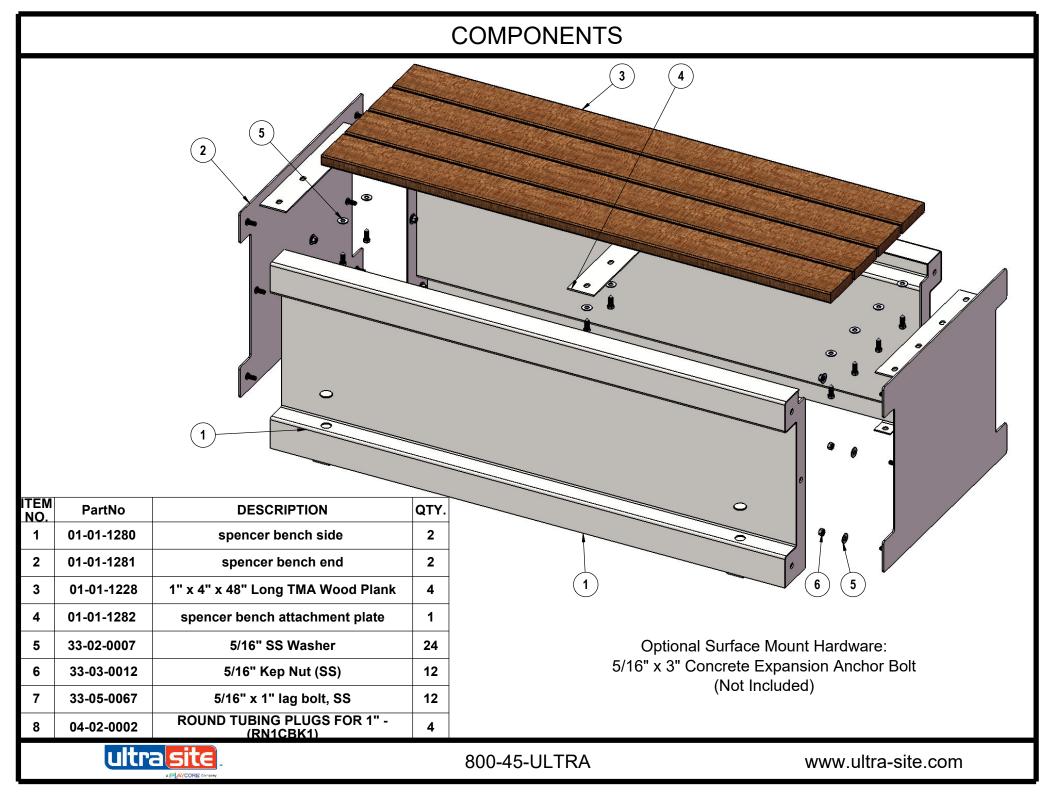


1/30/2024 Page 6 of 9

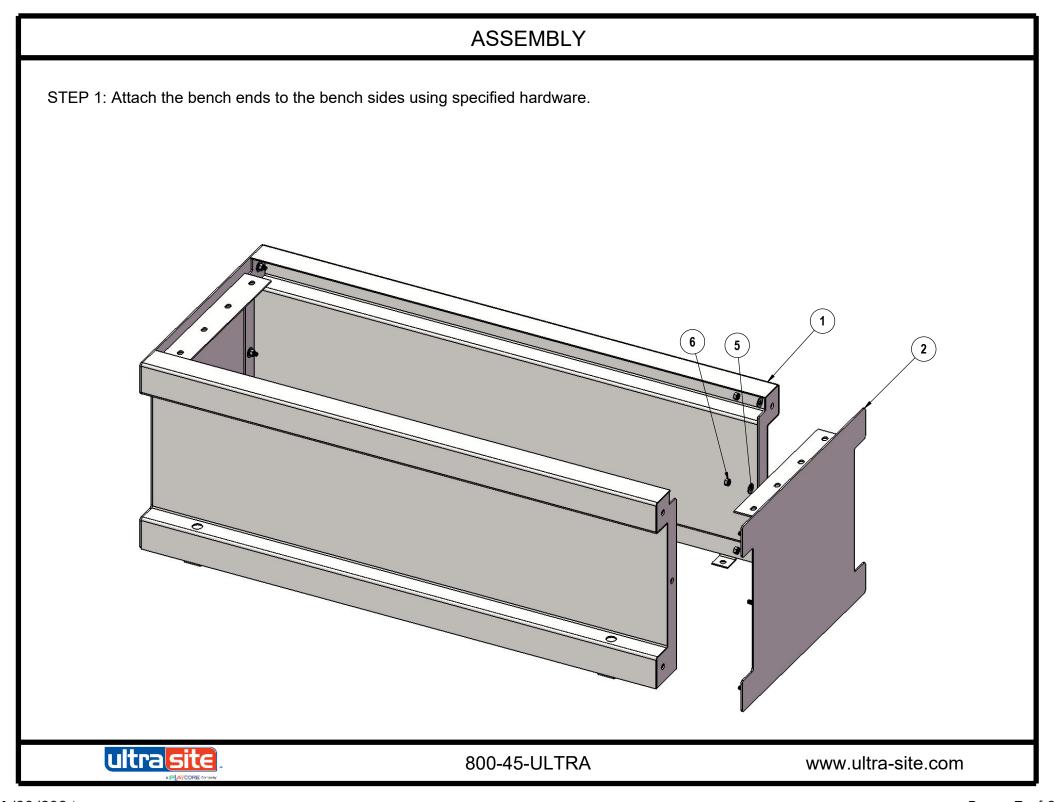

1/30/2024 Page 7 of 9

#### **ASSEMBLY**


STEP 2: Turn assembly upside down. Attach TMA planks to bench ends and attach the center attachement plate to the center of the TMA planks using specified hardware.

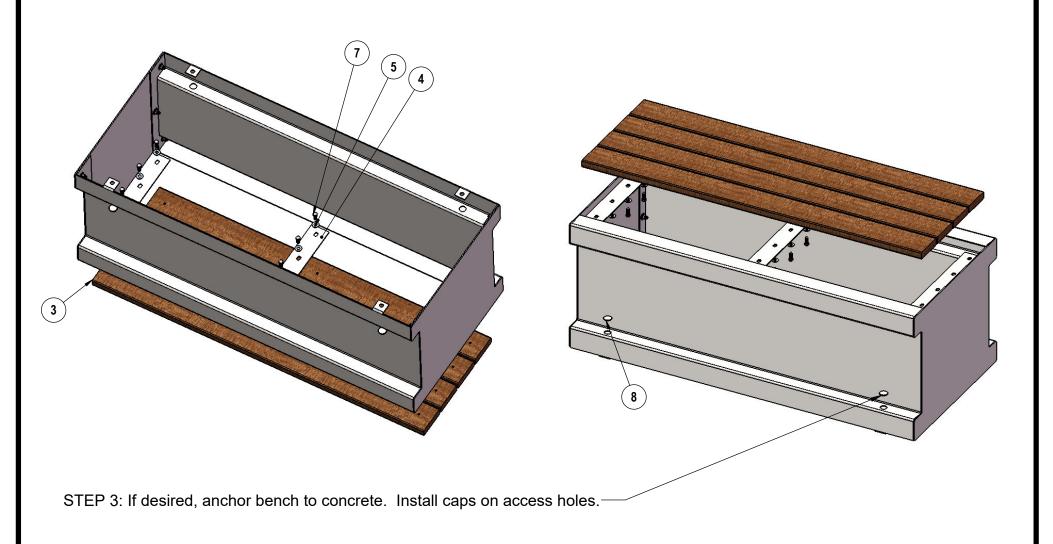

ultra site

800-45-ULTRA

www.ultra-site.com

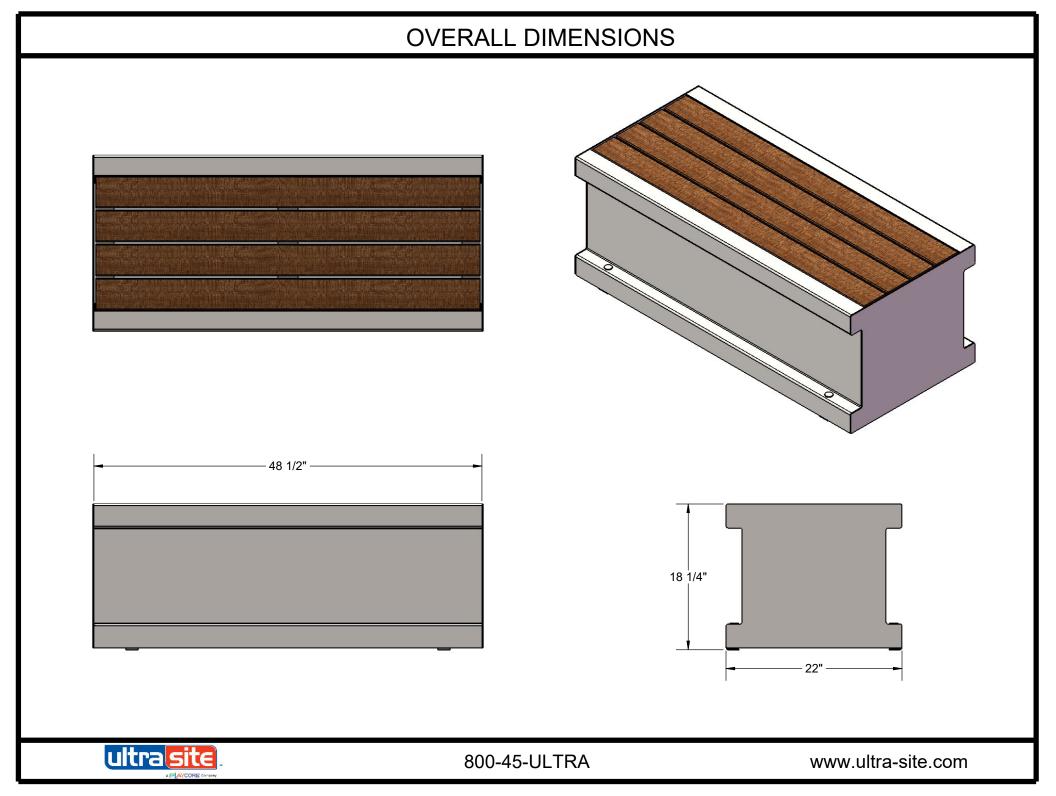

1/30/2024 Page 9 of 9