





Model # BT238-W6

10/16/2018 Page 1 of 11



1675 Locust Street Red Bud, IL 62278 Phone: 618-282-8200 Fax: 618-282-8202

### **WARRANTY & TERMS**

**WARRANTY: 5 Year Limited Warranty on Thermoplastic coated elements.** Ultra Play guarantees all items for one full year to be free of defects in workmanship or materials when installed and maintained properly. We agree to repair or replace, any items determined to be defective. Items specifically not covered by this warranty include vandalism, man made or natural disasters, lack of maintenance, normal weathering or wear and tear due to public abuse.

Damages or loss in transit is the responsibility of the carrier, whether visible or concealed. It is the responsibility of the recipient to assure that the order is received complete. Before signing the delivery receipt, inspect the shipment immediately and completely. Note any damages or shortages on the bill of lading. Damage reports must be filed within 5 days. Ultra Play is NOT responsible for damages or loss in transit. Title to all goods passes to the customer at the time of shipment. Ultra Play will assist in filing claims if the freight arrangements were made by Ultra Play at your request.

**CANCELLATIONS AND RETURNS:** Cancellations are only accepted with approval of Ultra Play. No merchandise shall be returned without a Return Goods Authorization number which is issued by customer service. Any authorized merchandise must be carefully packed and received in saleable condition. A restocking charge of up to 25% will be applied to all returned goods when the error is not the fault of Ultra Play. All returns must be shipped freight prepaid.


10/16/2018 Page 2 of 11



### **SAFETY WARNINGS & EQUIPMENT INSPECTION**


- Owners and installers please note these safety warnings and make use of this checklist on a regular basis.
- Follow installation instructions when erecting equipment.
- Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.
- Check for and repair damage caused by wear or vandalism, a major factor in injury causing situations.
- All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.
- All equipment should be free of rust and repainted whenever necessary to deter rusting.
- We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.
- Never add components not intended for use with this product.
- Regular maintenance is necessary in this and all park and recreational equipment to insure the safety of the user.
- Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.
- Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.
- Check to be sure all fittings are tight and that bars and pipes do not move.
- Replace all worn S-hooks. S-hooks must be completely closed. Failure to close S-hooks can result in serious injury to the user.
  NEVER reuse S-hooks.
- Test for free movement of swing hanger and other moving attached parts.
- Check for worn chains and replace them.
- A soft resilient surface should be placed under all swings extending at least twice the height of the top rail both front and back.


10/16/2018 Page 3 of 11

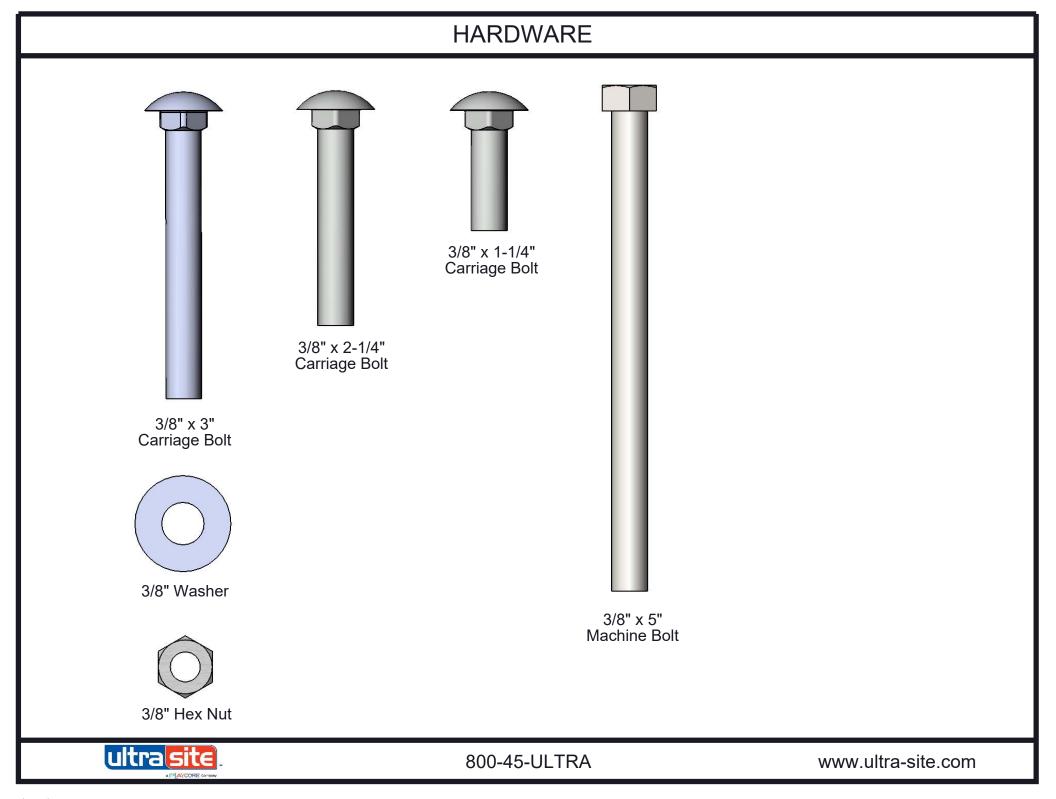



10/16/2018 Page 4 of 11

# TOOLS REQUIRED

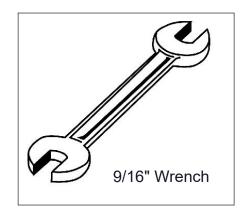

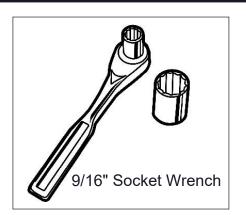

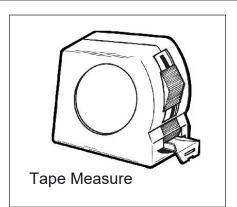

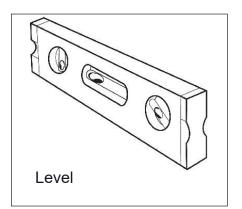



800-45-ULTRA www.ultra-site.com

10/16/2018 Page 5 of 11

### **ULTRA SITE PRODUCT SPECIFICATIONS**

#### BT238-W6 6' PORTABLE BOLT TOGETHER PICNIC TABLE WALK-THROUGH DESIGN

Top & Seats: Pressure Treated - 2" x 4" No. 1 Southern Yellow Pine pressure treated lumber.

Redwood Stain - 2" x 4" No. 1 Southern Yellow Pine with a redwood stain wood preservative

Untreated - 2" x 4" No.1 Southern Yellow Pine

Frame: 2-3/8" O.D. x 12 gauge pre-galvanized structural steel tubing. One 1 1/2" x 3/4" x 1/8" center channel shall be mechanically attached to the bottom side of tabletop to prevent warping of wood and to attach cross braces, thus providing over all strength and rigidity. Cross braces 1 5/16" O.D. x 14 gauge pre-galvanized structural steel tubing. All seat mounting brackets shall be precision punched and fabricated from 10 gauge formed angle. All top mounting brackets shall be precision punched and fabricated from 7g gauge formed angle. Legs are bent over a mandrel through the bend radius producing a wrinkle free bend.

Frame Coating: Electrostatic powder coated application oven cured or hot dipped galvanized.

Hardware: Hardware shall be hot-dipped galvanized or zinc coated.


Dimensions: 6' portable bolt together picnic table walk-through design. Top is 28-1/4" wide x 72" long and is 30-1/2" high. Seats are 9-1/4" wide x 72" long and 18-7/16" high. Outside to outside dimension is 62-1/8" x 72".



800-45-ULTRA www.ultra-site.com

10/16/2018 Page 6 of 11

# COMPONENTS

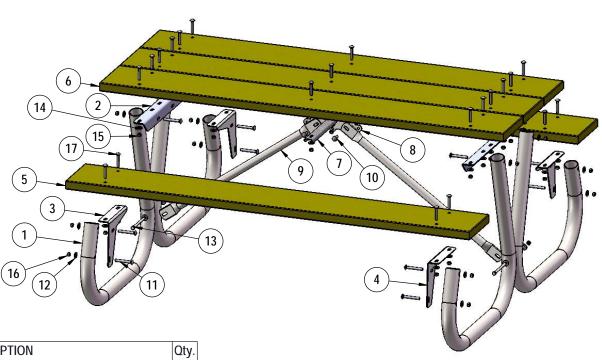

ITEM NO.	PartNo	DESCRIPTION	Qty.
1	01-04-0524	new BT238 wood leg	4
2	01-04-0506	wood table top angle (new)	2
3	01-04-0521	BT Seat Bracket (Left)	2
4	01-04-0522	BT Seat Bracket (Right)	2
5	XXX72-2x10-S1	2 x 10 Pressure Treated/Untreated/Redwood Stained Seat Plank (6')	2
6	XXX72-2x10-T1	2 x 10 Pressure Treated/Untreated/Redwood Stained Top Plank (6')	3
7	01-04-0507	center c channel 3 slot (new)	1
8	01-04-0508	wood table center bracket	1
9	01-04-0523	34-3/4" wood brace	2
10	33-06-0114	3/8" x 1-1/4" Carriage Bolt (Galv)	2
11	33-06-0008	3/8" x 3" Carriage Bolt (Zinc)	12
12	33-02-0002	3/8" Zinc Plated Washer	16
13	33-05-0083	3/8" x 5" Machine Bolt (Zinc)	2
14	33-02-0010	3/8" Galvanized Steel Flat Washer	25
15	33-01-0015	3/8" Hex Nut (GALV)	25
16	33-01-0002	3/8" Hex Nut (Zinc)	14
17	33-06-0113	3/8" x 2-1/4" Carriage Bolt (Galv)	23


ultra site.


800-45-ULTRA

www.ultra-site.com

10/16/2018 Page 7 of 11

## STEP 1

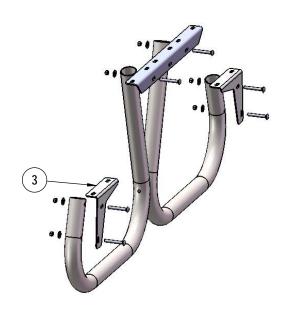

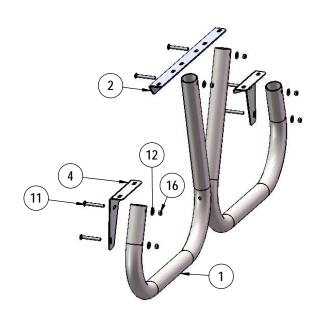


Attach the Seat Brackets and Top Angles to the 238 Frames as shown using specified hardware.



800-45-ULTRA www.ultra-site.com

10/16/2018 Page 8 of 11

## STEP 2

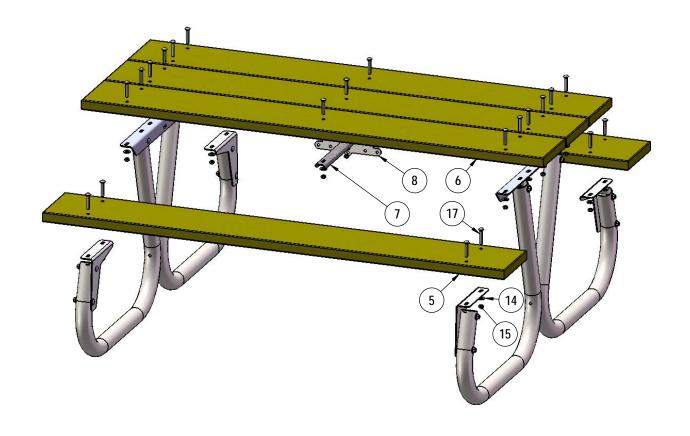


Attach the Wood Center Bracket, C-Channel, and the Wood Planks as shown using specified hardware.



800-45-ULTRA www.ultra-site.com

10/16/2018 Page 9 of 11

## STEP 3

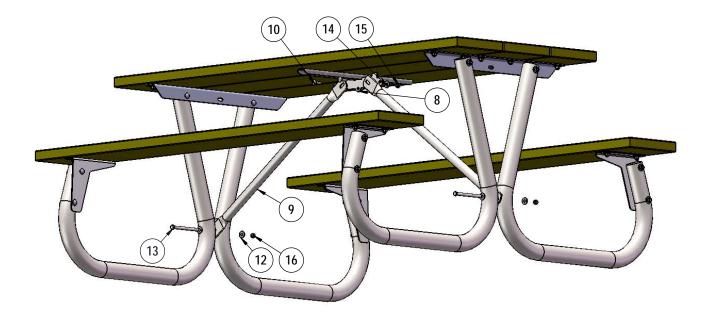


Attach the 34-3/4" Braces to the Wood Center bracket and the 238 Frames as shown using specified hardware.



800-45-ULTRA www.ultra-site.com

10/16/2018 Page 10 of 11

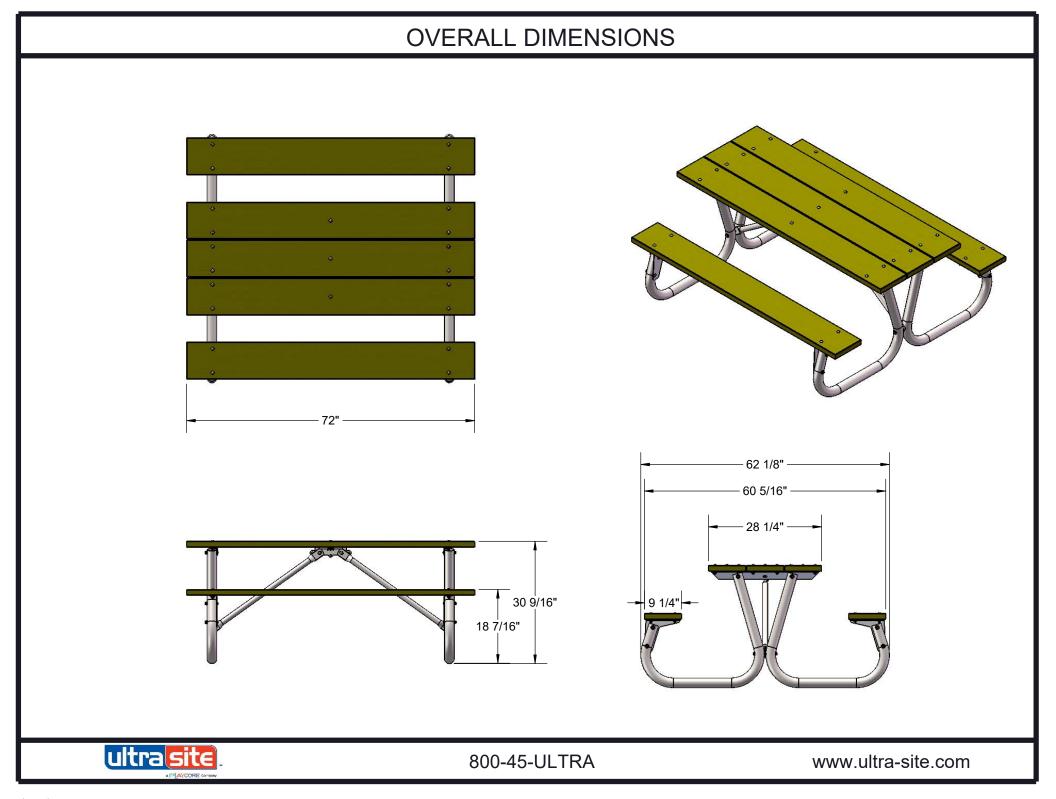

10/16/2018 Page 11 of 11